

# DCCPhoto.com

How to Swap an "Original" style control knob for an "OEM" style STi Control:




Write down the wire colors for your "Original" style control.

1 = \_\_\_\_\_

2 = \_\_\_\_\_

3 = \_\_\_\_\_

De-solder the wires.

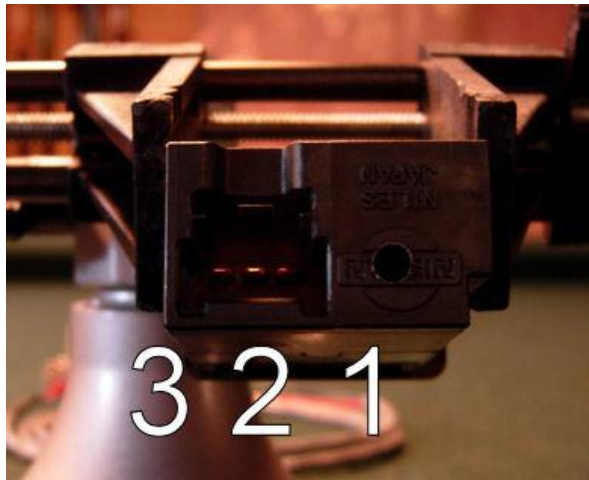

Re-solder the wires to the corresponding pins on the STi control. (1->1, 2->2, 3->3)