

# *DCCDPro.com*

How to attach "OEM" style STi Auto/Man Switch:


If you have the cable harness to the switch then simply insert corresponding wires in the terminal on 4 wire 22 AWG cable other wise you need to solder the wires directly to the pins as shown below:

Pin1 → white

Pin2 → Black

Pin3 → Green

Pin4 → Red

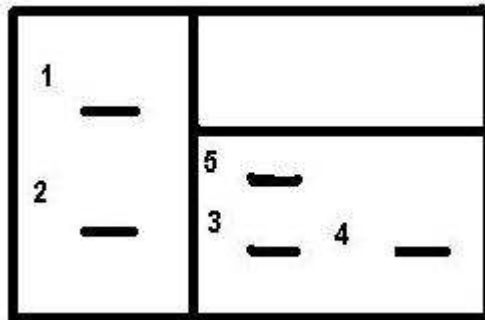

Above is the rear view of the STi Auto/Man switch without wiring for the DCCDPro controller in place.



Above is the rear view of the STi Auto/Man switch with wiring for the DCCDPro controller in place.

Solder as shown in the pictures to your STi Auto/Man switch. Try to do a neat job, preferably use heat shrink tube to insulate the pins from shorting to each other.