DCCD Controller				Cluster Pinouts				
Function	Color	Ver 4	Ver 6	2004	2005	2006	2007	2008
Auto	White		B4	A14		A16		
0%	Green		Do not Use	A5		A6		
20%	Yellow		B2	A4		A5		
40%	Orange		B1	A10		A12		
60%	Red		B11	A11		A13		
80%	Blue		B10	A12		A14		
Lock	Brown		B9	A13		A15		
+V	Black		Do not Use	Do not Use	Do not Use	Do not Use	Do not Use	Do not Use

*Note: Black is a special power suuply for early version Sti clusters that have a separate board for the dccd display. You risk damage to your controller if it is accidentally grounded, or connected when where it isn't supposed to be. Tape it off at the tip and insulate it from use if you do not have an early Sti cluster.

2004			2006	
Pin	Assign		Pin	Assign
			A1	EBD control
			A8	
A1			A2	ABS control module (don't use)
A2	Fuel Gauge		A3	Fuel Gauge
A3			A4	
A4	DCCD 1		A5	DCCD 1
A5	DCCD Rear		A6	DCCD Rear
A6	Engine Cont Mod		A7	Engine Cont Mod
A7	Turn LH		A9	Turn LH
A8	Thermometer		A10	Thermometer
A9	Thermometer		A11	Thermometer
A10	DCCD 2		A12	DCCD 2
A11	DCCD 3		A13	DCCD 3
A12	DCCD 4		A14	DCCD 4
A13	DCCD Lock		A15	DCCD Lock
A14	DCCD Auto		A16	DCCD Auto

USDM plug

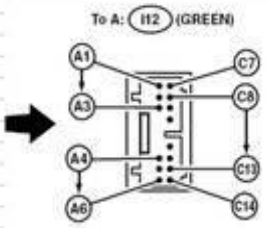

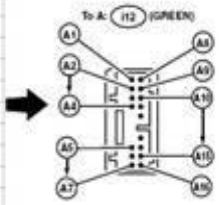

B1	Charge warning	B1	Charge warning
B2	Oil pressure	B2	Oil pressure
B3	ABS	B3	ABS
B4	R diff	B4	R diff
B5	Intercooler spray	B5	Intercooler spray
B6	Security	B6	Security
B7	Clock	B7	
B8	Ambient sensor	B8	Ambient sensor
B9	Seat Belt	B9	Seat Belt
B10		B10	
B11	Auto A/C	B11	Auto A/C
B12	Auto A/C	B12	Auto A/C
B13	Door switch	B13	Door switch
B14	Door light	B14	Door light
B15		B15	
B16	Cruise light	B16	Cruise light
B17		B17	
B18	Airbag	B18	Airbag
B19	Brake fluid/ parking brake	B19	Brake fluid/ parking brake
B20	Illume cont	B20	Illume cont
B21	Cruise module	B21	Cruise module
B22	Illume cont	B22	Illume cont
B23	Illume cont	B23	Illume cont
B24	Tail and illume	B24	Tail and illume
B25	Tail and illume	B25	Tail and illume
B26		B26	
B27	Tail and illume	B27	Tail and illume
B28	Tail and illume	B28	Tail and illume
B29	Dimmer/ High beam	B29	Dimmer/ High beam
B30	Headlight relay	B30	Headlight relay

C1		C1	
C2	Speed sensor	C2	Speed sensor
C3	Turn RH	C3	Turn RH
C4		C4	
C5	ECM	C5	ECM
C6	Micro computer	C6	Micro computer
C7	IGN switch/ power	C7	IGN switch/ power
C8	Tail illume relay	C8	Tail illume relay
C9		C9	
C10	Into Micro computer	C10	Into Micro computer